



## DIESEL PERFORMANCE SPECIALISTS, INC.

616.642.6064

7211 CENTERLINE RD. SARANAC, MI 48881



[www.dps-performance.com](http://www.dps-performance.com)

Copyright© 2003 Diesel Performance Specialists, Inc.

---

### BOOST GAUGE INSTALL KIT- FORD POWERSTROKE

1. Install the tubing for boost gauge into the brass compression/1/8" NPT fitting on the T and make sure the brass adapter is securely tightened to the T fitting.
2. Locate the line running from the intake manifold to the MAP sensor.
3. Cut the line and install the "T" fitting. (closer to the intake manifold is preferred) Secure with the 2 clamps provided.
4. Run the line into the cab, and install on the boost gauge using the other brass compression/1/8" NPT fitting.

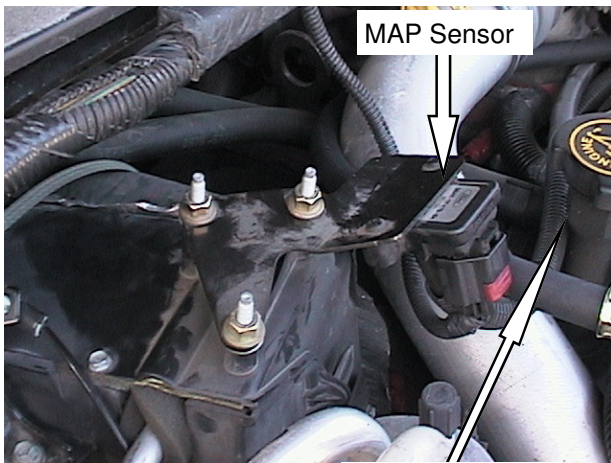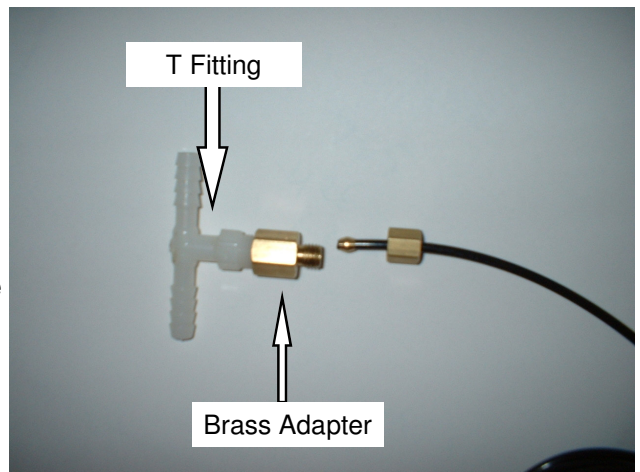

Line From Intake

